

User Manual

Hilite Chair Knock Down

COMFORT AND EASE

KA582KD Updated: April 2024



Hilite Chair Knock Down

This chair features a Knock Down design that allows for adjustable width, ensuring a perfect fit.

It is equipped with full-length padded armrests for maximum comfort and a contoured backrest that enhances lumbar support. The fabric used is both anti-fungal and anti-bacterial, ensuring cleanliness and hygiene. Additionally, it has been tested for fire resistance and wear resistance, providing durability and safety. The seat height is adjustable, allowing for a customized seating experience. The new transit wheels make it easy to move around the house.





Features


- Width adjustable design
- Very sturdy and durable
- · Anti fungal & anti bacterial fabric
- Tool-less assembly
- Easy transit wheels

Specifications	Max Seat Width	Min Seat Width	Max Seat Height	Min Seat Height	Max Seat Depth	Min Seat Depth	Max User Weight
Hilite Chair Standard Knock Down Greystone KA582KDG05-200kg	550mm	490mm	580mm	430mm	500mm	480mm	200kg
Hilite Chair Standard Knock Down Champagne KA582KDV03-200kg	550mm	490mm	580mm	430mm	500mm	480mm	200kg

Safety Precautions

Safety Warnings

- 1. Do not exceed the maximum user weight.
- 2. Ensure that the leg adjusting pins are fully engaged before use. (See image B). Failure to observe these warnings may result in serious injury.
- 3. Periodically inspect the assembly fasteners to ensure that they are tight.

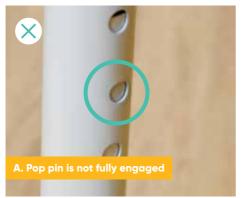






Assembly

Step 01

Unpack the contents of the box and check there are no missing parts. The box should contain.

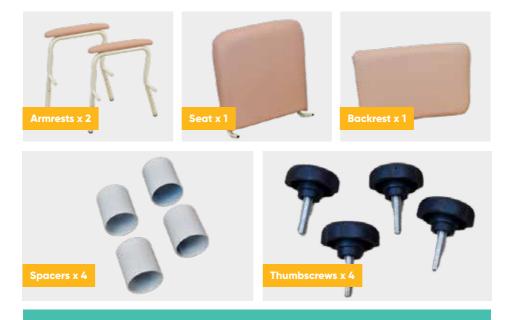

If there are any parts missing, please contact the K Care Customer Service Team on: 1300 783 783.

Step 02

Flip the seat and armrest upside down and insert each armrest into the tubing on the underside of the seat.



Make sure the hole in each armrest lines up with the corresponding hole on the tube located beneath the seat. Secure it by screwing in the thumbscrew. Avoid over-tightening.









Adjusting Seat Width

Step 01

In order to adjust the seat width, slide each spacer over the two ends of both armrests.



Step 02

Insert both armrests by sliding the ends through the tubing located on the underside of the seat.



Step 03

Ensure the thread hole in each armrest lines up with the holes on the tube located on the underside of the seat. Screw in the thumbscrew. Do not over tighten.



Insert Backrest

Step 01

There are two holes at the end of the backrest, line up with the tubing ends on the seat.



Press down firmly to slide into place.








Adjusting Height

Step 01

To adjust the height, press down on the pin and slide the inner tubing to the preferred height.

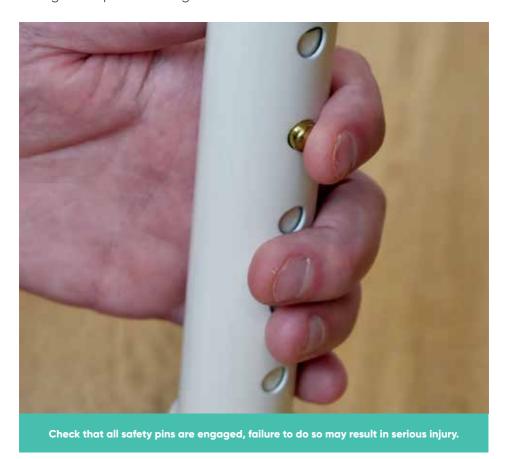

Cleaning and Maintenance

The Hilite Chair can be cleaned with a low strength detergent, warm water and a soft textured cloth.