


## Change of the crossbar screw on Agile



Previous Version



Updated Version

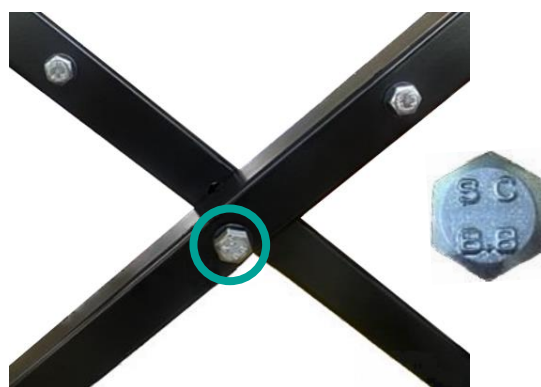

- ✓ To improve the strength of the crossbar screw, Karma has changed the screw grades and colour from metric class 4.8 black to class 8.8 silver-white. The new screw has also added a head marking "S C 8.8" as the photo shows.
- ✓ The updated version was implemented by the batch of serial no. HM22-039490.
- ✓ The updated version was implemented on Agile.
- ✓ The updated version is backward compatible with the existing one.

### Order Information

Article number	110800000550	Hex Head Screw-SI Half-thread M8*P1.25*63L
	420300000140	AGL LeftCrossbar Comp 20*18" Flat Black
	420300000141	AGL LeftCrossbar Comp 18*18" Flat Black
	420300000144	AGL LeftCrossbar Comp 18*16" Flat Black
	420300000145	AGL LeftCrossbar Comp 16*18" Flat Black
	420300000148	AGL LeftCrossbar Comp 16*16" Flat Black
	420300000143	AGL RightCrossbar Comp 20*18" Flat Black
	420300000142	AGL RightCrossbar Comp 18*18" Flat Black
	420300000146	AGL RightCrossbar Comp 18*16" Flat Black
	420300000147	AGL RightCrossbar Comp 16*18" Flat Black
	420300000149	AGL RightCrossbar Comp 16*16" Flat Black